


MIDI Control Information List

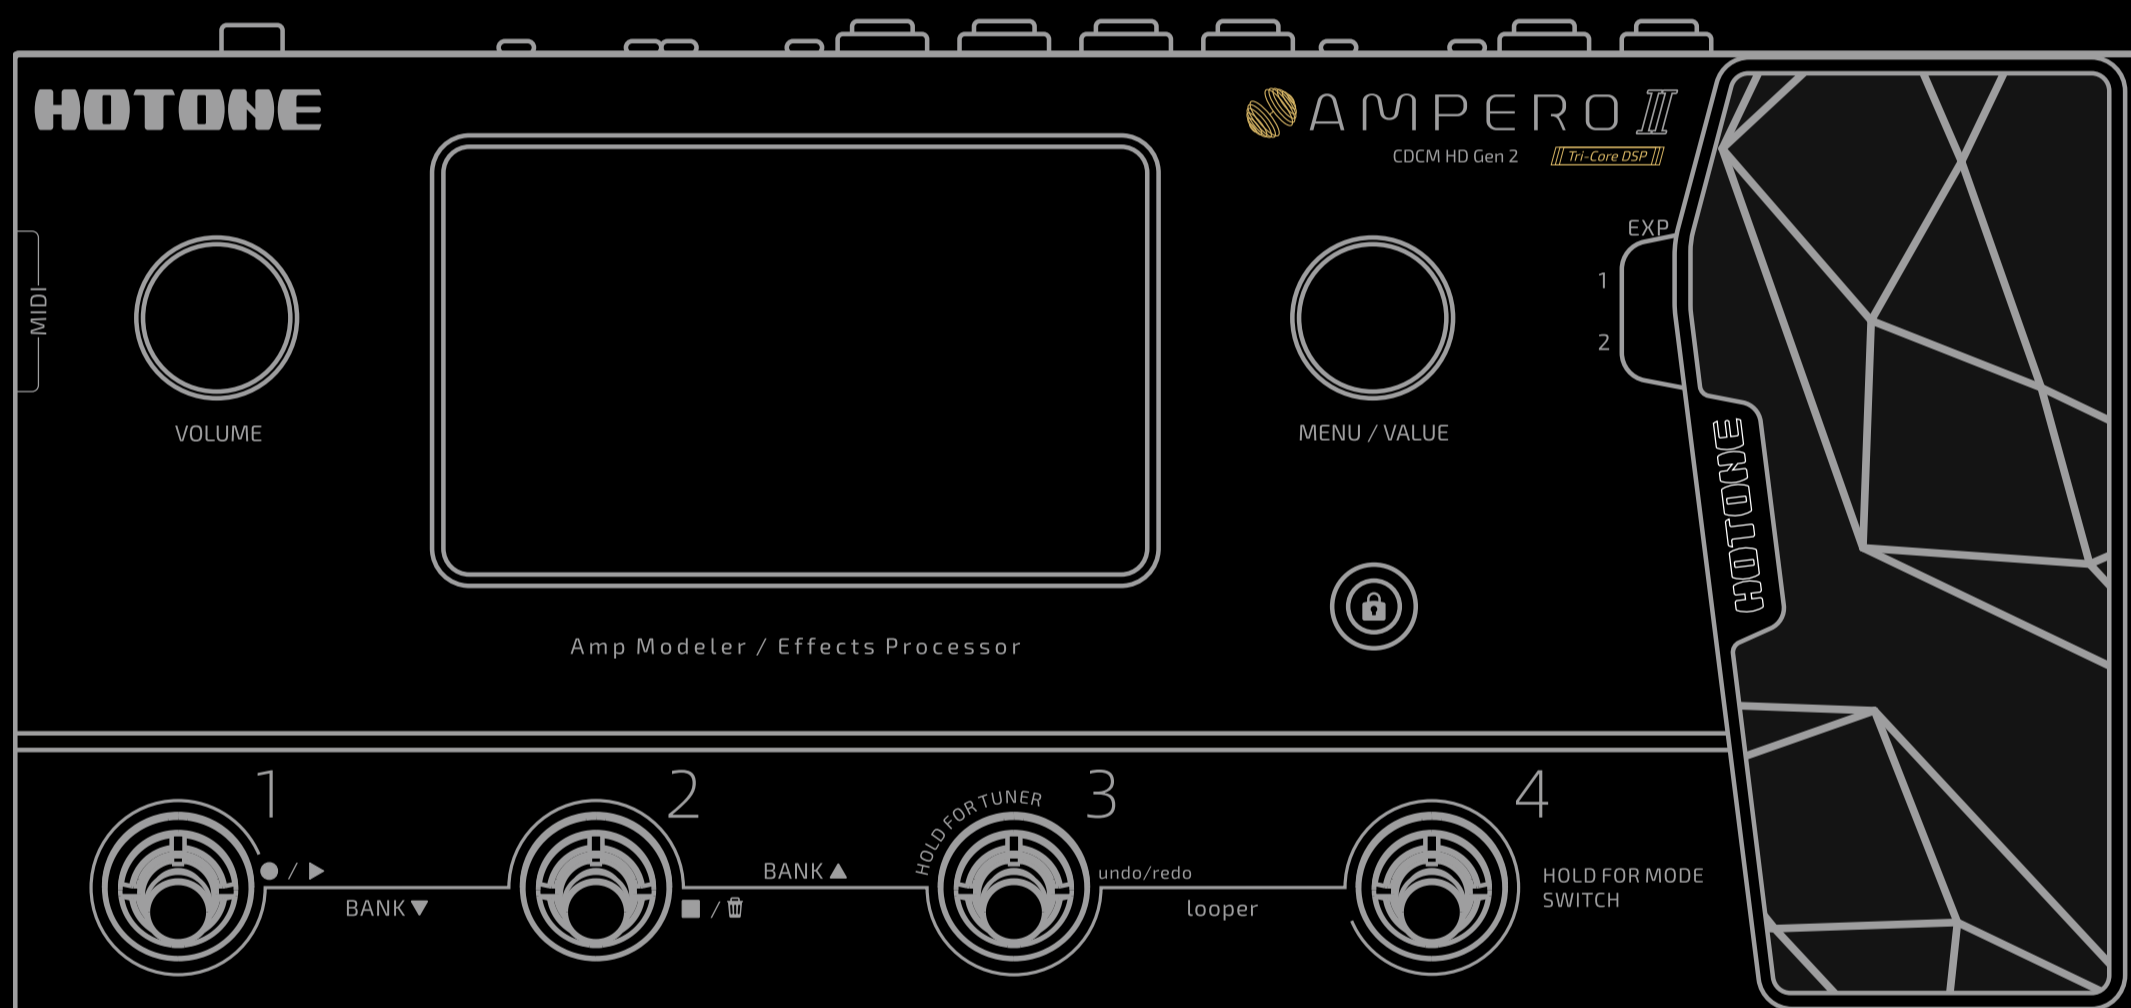

HOTONE
 DESIGN INSPIRATION

CC#	Value	Description
0	0-2	Bank MSB: P01-1~P32-4: CC 0=0, PC=0-127 P33-1~P64-4: CC 0=1, PC=0-127 P65-1~P75-4: CC 0=2, PC=0-43
7	0-100	Patch Volume
11	0-127	Expression Pedal (EXP 3)
13	0-127	EXP 1/2 Switch: 0-63: Off 64-127: On
16	0-127	Quick Access Para 1
17	0-127	Quick Access Para 1 parameter adjustment: 0-63: Turn down by 1 step 64-127: Turn up by 1 step
18	0-127	Quick Access Para 2
19	0-127	Quick Access Para 2 parameter adjustment: 0-63: Turn down by 1 step 64-127: Turn up by 1 step
20	0-127	Quick Access Para 3
21	0-127	Quick Access Para 3 parameter adjustment: 0-63: Turn down by 1 step 64-127: Turn up by 1 step
22	0-127	Bank -
23	0-127	Bank +
24	0-127	Pre-Select Menu
25	1-4	Choose a scene in the current patch: 1: Scene 1 2: Scene 2 3: Scene 3 4: Scene 4
26	0-127	Patch -
27	0-127	Patch +
28	0-127	Unit Mode: 0-63: Patch Mode 64-127: Stomp Mode

Main Menu only

CC#	Value	Description
29	0-127	Main Display Mode: 0-63: Mode 1 (Patch Mode) or Footswitch (Stomp Mode) 64-127: Mode 2 (Patch Mode) or FX Chain (Stomp Mode)
36	0-127	Drum Machine Menu On/Off: 0-63: Off 64-127: On
37	0-127	Drum Machine Play/Stop: 0-63: Stop 64-127: Play
38	1-100	Drum Machine Rhythm Type
39	0-100	Drum Machine Volume
48	0-127	Slot A1 On/Off: 0-63: Off 64-127: On
49	0-127	Slot A2 On/Off: 0-63: Off 64-127: On
50	0-127	Slot A3 On/Off: 0-63: Off 64-127: On
51	0-127	Slot A4 On/Off: 0-63: Off 64-127: On
52	0-127	Slot A5 On/Off: 0-63: Off 64-127: On
53	0-127	Slot A6 On/Off: 0-63: Off 64-127: On
54	0-127	Slot B1 On/Off: 0-63: Off 64-127: On
55	0-127	Slot B2 On/Off: 0-63: Off 64-127: On
56	0-127	Slot B3 On/Off: 0-63: Off 64-127: On

CC#	Value	Description
57	0-127	Slot B4 On/Off: 0-63: Off 64-127: On
58	0-127	Slot B5 On/Off: 0-63: Off 64-127: On
59	0-127	Slot B6 On/Off: 0-63: Off 64-127: On
60	0-127	Tuner On/Off: 0-63: Off 64-127: On
62	0-127	Looper Menu On/Off 0-63: Off 64-127: On
63	0-127	Looper Rec/Overdub
64	0-127	Looper Play/Stop 0-63: Stop 64-127: Play
65	0-127	Looper Speed 0-63: 1/2 Speed 64-127: Normal
66	0-127	Looper Playback 0-63: Reverse 64-127: Normal
67	0-127	Looper Undo/Redo
68	0-127	Looper Clear
69	0-100	Looper Rec Level
70	0-100	Looper Loop Level
71	0-127	Looper Pre/Post 0-63: Post 64-127: Pre
72	0-127	Looper A/B Chain 0-63: Chain A 64-127: Chain B
74	0-2	Tempo MSB CC74=0, CC75=40-127: 40BPM-127BPM CC74=1, CC75=0-127: 128BPM-255BPM CC74=2, CC75=0-44: 256BPM-300BPM

CC#	Value	Description
75	0-127	Tempo LSB
76	0-127	Tap Tempo
77	0-127	Screen Lock/Unlock Lock: 0-63 Unlock: 64-127
78	0-2	Unit Engage/Bypass 0: Analog Bypass 1: DSP Bypass 2: Engage
79	0-127	FS 1 Effect Slot On/Off
80	0-127	FS 2 Effect Slot On/Off
81	0-127	FS 3 Effect Slot On/Off
82	0-127	FS 4 Effect Slot On/Off